CERAMIC FAN HEATER

HI FAN tower - User Manual

Please read the instructions carefully before using the product and keep for future reference.

V1/09

1. Product features

- 2 heating power levels (1300W / 2500W)
- Touch sensor switch
- LED function indicator
- With remote control
- 0.5-7.5 hours timer
- Automatic horizontal oscillation 90°
- Overheat protection
- Tip-over protection
- With removable air filter for easy cleaning

2. Safety warnings

- This product is not a toy. It should not be used by children or infirm persons without supervision.
- Children would be supervised to ensure that they do not play with the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Disconnect from mains when not in use or cleaning.
- Do not operate the appliance with a damaged cord or plug. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- It is not recommended to use an extension cord.
- The heater is hot when in use .To avoid burns, do not let bare skin touch hot surface.

- Do not immerse cord, plug or any part of the appliance in water or any other liquid.
- Do not use the heater in dusty environments or where flammable vapours are present (e.g. in a workshop or garage).
- Do not place the heater on or near any other source of heat.
- Warning: in order to avoid overheating, do not cover the heater.
- A fire may occur if the heater is covered with or touches flammable material, including curtains, drapes, bedding etc. when in operation. KEEP THE HEATER AWAY FROM SUCH MATERIALS.
- Do not use the heater in the immediate surroundings of bathtrooms, showers, washing stands or swimming pools.
- Do not locate the heater below a socket-outlet.
- Do not let the mains lead hang over the edge of the table or work surface or touch hot surfaces.
- Do not use outdoors.
- Do not use the appliance for other than its intended use. This appliance is intended for household use only.
- Do not misuse the cord or pull the cable to disconnect it from the outlet. Instead, grasp the plug and pull it to disconnect.
- Do not attempt to repair, disassemble or modify the appliance. There are no user-serviceable parts inside.
- Do not insert or allow foreign objects to enter the ventilation or exhaust openings as this may cause an electric shock , fire or damage to the appliance.
- Do not use this heater with a programmer, timer or any other device that switches the heater on automatically, since a fire risk exists if the heater is covered or positioned incorrectly.
- When the heater is turned on for the first time, it may release a slight, harmless odour. This odour is a normal occurrence caused by the initial heating of the internal heating elements and should not occur again.

- Please do not put any unit on the product.
- In order to avoid any accident, please turn off the unit when people leave.
- Please do not use the product when there are no people to take care of children, animal or the disabled people.
- If do not use the product for a long time, please disconnect the plug, put the product into the box and stock the product in a dry and ventilated place.
- When using the product, please do not make the air outlet and inlet next to the wall or curtain to avoid obstructing of the air and influence the effect.
- Please do not use the product under the direct sunshine.
- The inflammable or explosive article is not allowed to put around the heater. And the product is not allowed to use in the environment filled inflammable air or dust.
- Please do not make the power cord touching the net cover in order to avoid the high temperature hurts the power cord.
- Do not make the wet clothes hang above the heater.
- The power supply, voltage and frequency must comply with the main technical request of heater.
- The ammeter and the internal line used must bear the using frequency of heater, and also take into account that the other electrical appliance can be used at the same time.

- Don’t ping or shake the unit when it is in operation.
- Please keep wind inlet & outlet unblocked, to avoid any malfunction appearance, such as distortion, changing colour etc.
- Don’t touch power cord to wind outlet, it will damage the insulation layer of wires.
- Ensure no water or rain drop into the unit, in order to avoid creepage, electric shock, short circuit or fire.

- Clean the surface of the unit with damp cloth (or add some detergent). Do not use corrosive detergent or solvent to clean. Not allowed to wash with water.
- Don’t handle the power cord and plug by wet hands.
- Don’t insert the wood or metal stick or other slim objects into air inlet or outlet.
- Don’t put heavy objects onto the power cord.
- Don’t face the wind outlet to babies for a long time.

3. Assembly instruction

- Open the packing, take the unit out and unscrew the cover fixer.

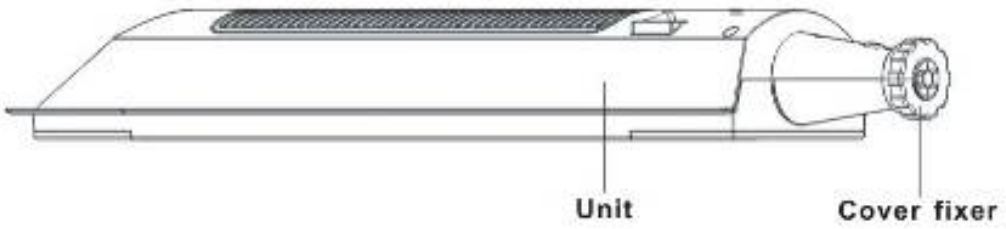

- Insert the glass base into the bottom of the unit, screw the cover fixer.

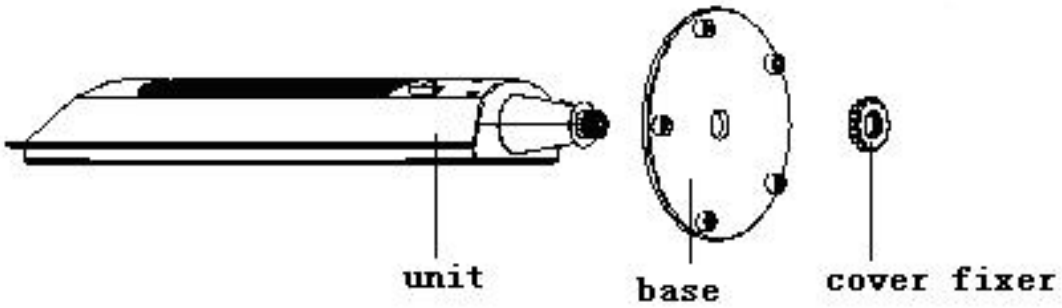

- Upright the unit and place it on the flat floor before use.

4. Parts description

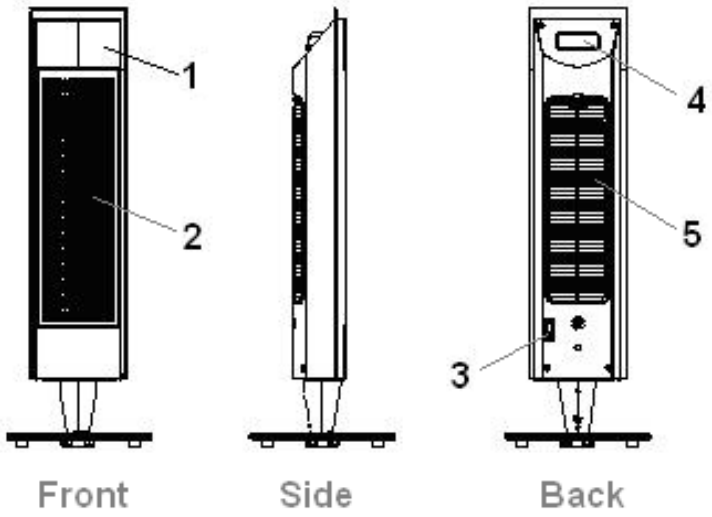

1. Control panel and display
2. Air outlet
3. Power button
4. Handle
5. Air filter & filter cover

5. Operating instruction

Firstly, connect the power cord with correct power supply.

Power button (at the bottom of rear cover under the removable air filter)

Press the power button to “I” position. If you heard the sound of “didi”, the heater is ready to use. Press the button to “0” position to turn off the heater.

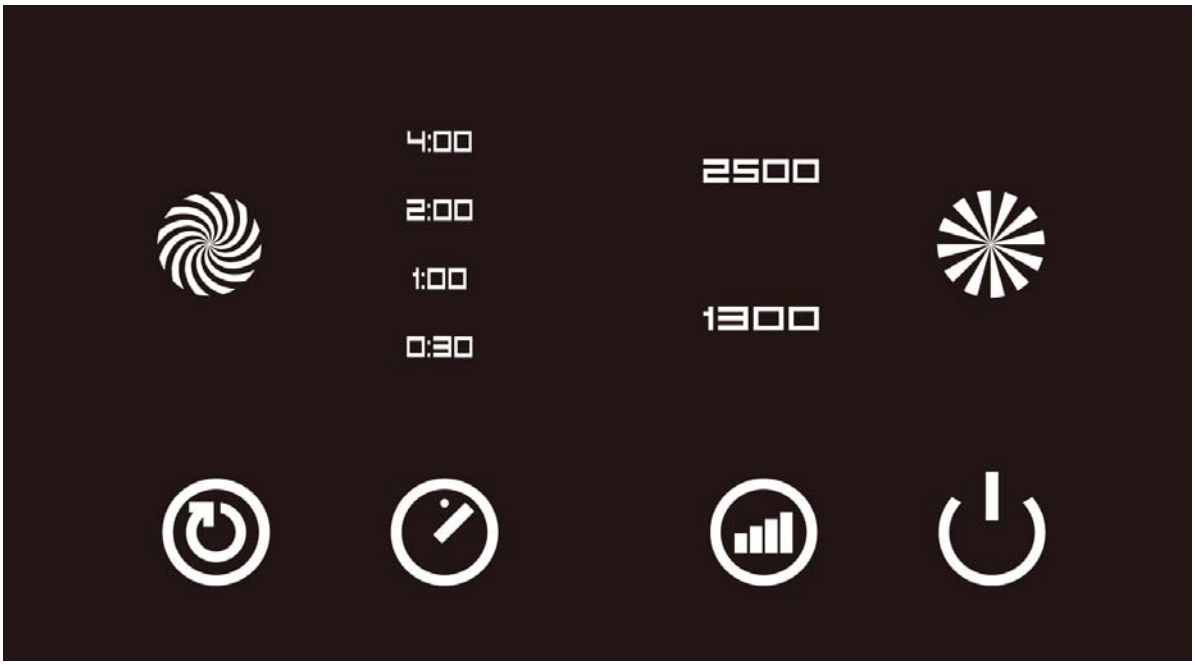

Control Panel and display

ON/OFF (STAND-BY) key

Press the “ ” key, the power indicating light will be on, the unit starts operation at low heating power (1300W). Press the key again, then all the functions are stopped and the unit goes into the condition of standby and the power indicating light will be off.
To turn OFF completely the unit, press the power button to “0”.

HEATER key (power level setting)

When the product is heating with low power, touch the “ ” key, then the high power is on, and the LED indicator will be showed as “2500W”. Press the key again, low power is on and the LED indicator will be showed as “1300W”.

SWING key (Horizontal Oscillation)

When the unit is working, press the “ ” key, the wind will turn left or right automatically. At the same time, the LED indicator will be on. Press the key again, the function is stopped and the LED light is off.

TIMER key

When the unit is on work, press the “ ” key and the unit goes into condition of setting time. You can choose 0.5 - 7.5 hours. The time will be added by 0.5 hours per every press of the key. At the same time, the display window will show the time of your setting. The unit will turn off automatically according to your set time.

6. Remote control operation

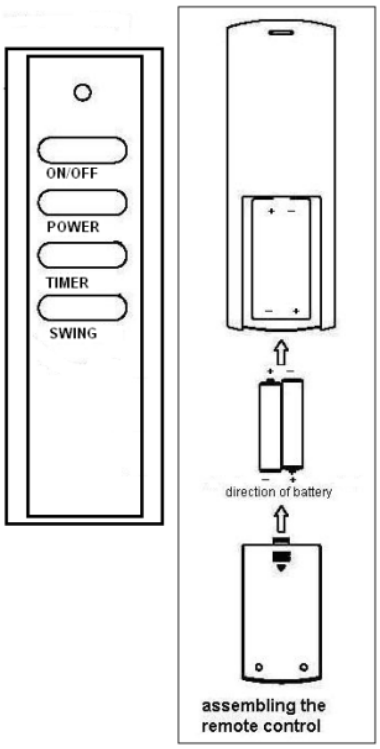

Operation instruction of remote control

Open the battery cover at the back side of remote control and then push the cover backwards. Insert 4 x AAA batteries in the remote control in right electrode position.

(Please refer to the picture of assembling the remote control).

There are 4 keys on the remote control and the function is the same as the control panel. Point the remote control to direction of the display of the heater. The signal distance is about 6 m.

7. Cleaning and maintenance

Make sure power is off and the plug is disconnected from the socket before cleaning or maintenance. Otherwise, it will cause you an electric shock.

1. Clean unit surface

   Clean the surface with damp cloth (or add some detergent). Do not use corrosive detergent or solvent to clean such as Petrol. Do not wash unit with water.

2. Clean air filter monthly if needed.

- Remove the air filter for cleaning as shown in the following diagram.

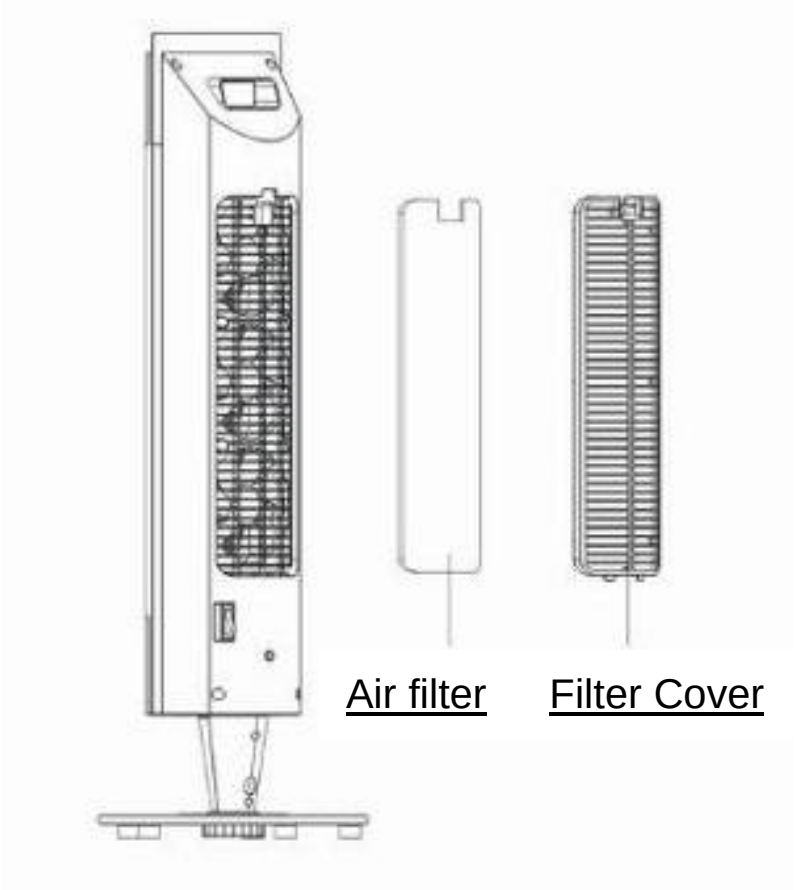

- Do not use chemicals for cleaning.
- Use the soft cloth to wipe the dust. If you use water for cleaning, please make sure the air filter is dry before reinstall back to the unit.

8. Information for correct disposal of the product in accordance with the European Directive 2002/96/EC

At the end of its working life this equipment must not be disposed of as an household waste. It must be taken to special local community waste collection centres or to a dealer providing this service. Disposing of electrical and electronic equipment separately avoids possible negative effects on the environment and human health deriving from an inappropriate disposal and enables its components to be recovered and recycled to obtain significant savings in energy and resources. In order to underline the duty to dispose of this equipment separately, the product is marked with a crossed-out dustbin.

www.argoclima.com

Made in China